


Quickstart Guide

1



- Make sure Pulse Link and the Pulse Satellite bulbs are powered on

2

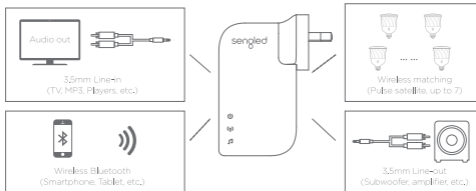

- Connect Pulse Link to your audio device in one of two ways:
 - a)Wired: Connect “Audio Out” from your device to the Pulse Link 3.5mm Aux input
 - b)Wireless: Connect via Bluetooth® connection on your mobile device
(Bluetooth® ID: Pulse Link C01-BR30, disregard passcode as it is not required for setup)

3




- Download and launch Sengled Pulse mobile app

4



- Follow the in-app instructions to connect Pulse Satellite bulbs to Pulse Link
(Menu → Device Management → Add New Device → 'Scan QR Code' or 'Input AD Code' → Link)

5

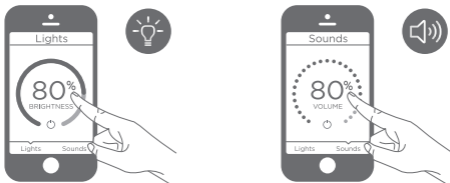

- Use the Pulse App to control lighting and Sounds